

PAIR OF ANTI-TRAUMA STRAPS

P70H30S

Pair of anti-trauma straps

Benefits

- Compact, light system
- Relieves legs when hanging in a harness

Uses


- Construction
- Industry
- Logistics
- Services

Packaging

- Single unit
- Box of 50 units
- Unit of sale: single unit

Description	Code
Pair of straps	68 433 037

Installation

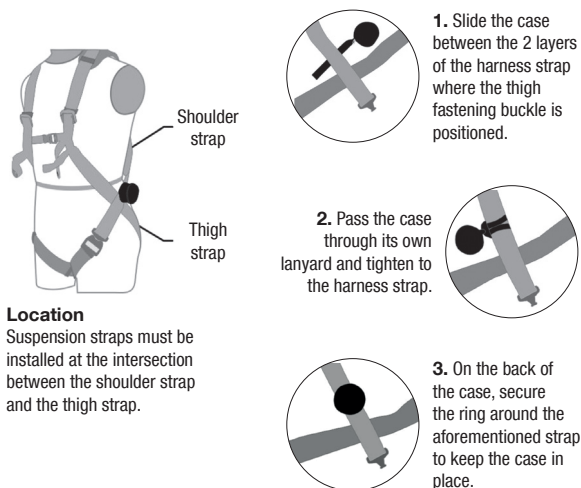

Location
Suspension straps must be installed at the intersection between the shoulder strap and the thigh strap.


- Slide the case between the 2 layers of the harness strap where the thigh fastening buckle is positioned.
- Pass the case through its own lanyard and tighten to the harness strap.
- On the back of the case, secure the ring around the aforementioned strap to keep the case in place.

Description

- System specifically designed to preserve good blood circulation after a fall and alleviate the negative effects due to prolonged hanging in a harness
- Compact and light
- Attached to the harness using the textile buckle and the ring
- Foolproof operation
- Adjustable length
- Polyester straps
- Steel fittings



Use & steps

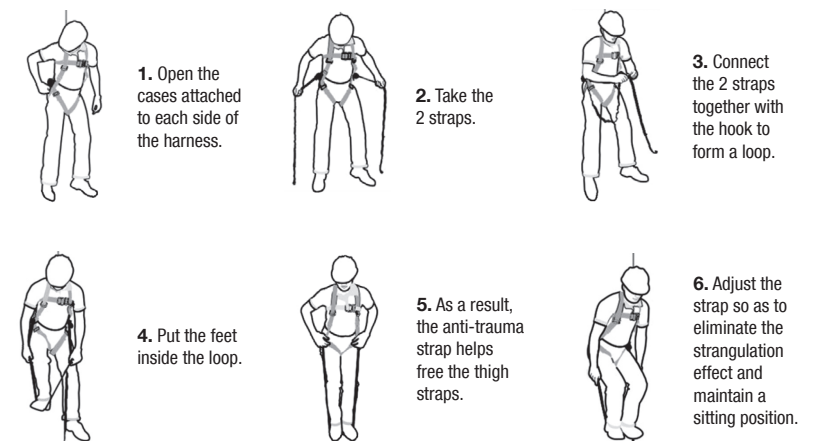

- Open the cases attached to each side of the harness.
- Take the 2 straps.
- Connect the 2 straps together with the hook to form a loop.
- Put the feet inside the loop.
- As a result, the anti-trauma strap helps free the thigh straps.
- Adjust the strap so as to eliminate the strangulation effect and maintain a sitting position.